

12. EXPLODED VIEW & REPLACEMENT PART LIST


12.1 EXPLODED VIEW

The diagram illustrates the exploded view of a mobile phone, showing the following main assemblies and their components:

- Upper assy:** Includes parts 1, 3, 5, 6, 8, 11, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59.
- Lower assy:** Includes parts 1, 3, 5, 6, 8, 11, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59.
- Front assy:** Includes parts 1, 3, 5, 6, 8, 11, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59.
- Slide assy:** Includes parts 1, 3, 5, 6, 8, 11, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59.
- Rear assy:** Includes parts 1, 3, 5, 6, 8, 11, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59.
- Phone assy:** Includes parts 1, 3, 5, 6, 8, 11, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59.
- Addition:** Includes parts 1, 3, 5, 6, 8, 11, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59.

59	COVER,BATTERY	1	MCJA0065201	
58	PCB	1		
57	PCB ASSY,MAIN	1		
56	MAIN BUTTON,DIAL	1	AKAC0001609	
55	SCREW	6	GMZ0019005	
54	ANTENNA, GSM FIXED	1	SNCF0034501	
53	ANTENNA, BLUE-TOOTH	1	SNCF0029801	
52	BATTERY,CLIP PLATE	1	MSDD0007001	
51	LOCKER,BATTERY SPRING	1	MSGC0014201	
50	LOCKER,BATTERY	1	MLEA0046601	
49	PAD, CAMERA	1	MPBT0046301	
48	PAD, FLASH	1	MGAE0000701	
47	LENS,FLASH	1	MLCE0008301	
46	LABEL,A/S	1	MLAB0001102	
45	TAPE,PROTECTION REAR	1	MTAB0243101	
44	TAPE,PROTECTION FLASH	1	MTAB0192201	
43	WINDOW,CAMERA	1	MWAE0028901	
42	TAPE,CAMERA WINDOW	1	MTAK0003601	
41	WINDOW,FLASH	1	MWAH0008601	
40	TAPE,FLASH WINDOW	1	MTAZ0197901	
39	COVER,REAR	1	MCJN0081201	
38	FILTER, MIC	1	MFB00026401	
37	BUTTON,CAMERA KEY	1	MBJL0046401	
36	TAPE,PROTECTION(camera)	1	MTAB0209604	
35	BUTTON,SIDE KEY	1	MBJL0046301	
34	TAPE,PROTECTION(SIDE)	1	MTAB0209602	
33	TAPE,FPCB	1	MTAZ0214501	
32	BUTTON,HOLD KEY	1	MBJC0023201	
31	TAPE,PROTECTION(HOLD)	1	MTAB0209603	
30	COVER,FRONT	1	MCJK0077201	
29	DECO,MAIN	1	MDAG0031103	
28	CAP,RECEPTICLE	1	MCC00040201	
27	TAPE,PROTECTION(MMI)	1	MTAB0209601	
26	GUIDE, FRONT	1	MSGY0022201	
25	TAPE,PROTECTION HINGE	1	MTAB0240701	
24	SCREW	4	CMEY0010401	
23	CAP,SCREW	2	MPBN0051801	
22	SCREW	2	GMZ0019003	
21	HINGE SLIDE	1	ARDY0003901	
20	BUTTON,SLIDE	1	ABGG0000803	
19	SCREW	4	CMEY0017301	
18	Slide PCB	1		
17	TAPE,PROTECTION ZIP	1	MTAB0197501	
16	TAPE,PROTECTION FPCB	1	MTAZ0198803	
15	PAD, PCB (SPEAKER)	1	MPBF0033601	
14	LCD Assy	1	H/W #8	
13	TAPE,PROTECTION WINDOW	1	MTAB0192101	
12	TAPE,PROTECTION VIEW	1	MTAB0238601	
11	TAPE (STOPPER)	2	MTAZ0207101	
10	PAD,LCD	1	MPBN0051801	
9	MAGNET,SWITCH	1	MMAA0008701	
8	FILTER,SPEAKER	1	MPBN0045101	
7	STOPPER RIGHT	1	MSGY0022101	
6	STOPPER LEFT	1	MSGY0022001	
5	COVER,SLIDE(UPPER)	1	MCJW0015201	
4	TAPE,DECO	1	MTAA0147001	
3	TAPE,WINDOW	1	MTAD0074701	
2	DECO,FOLDER(UPPER)	1	MDAE0041901	
1	WINDOW,LCD	1	MWAC0088201	
NO.	DESCRIPTION	Q'TY	DRAWING NO.	REMARK

ASS'Y EXPLODED VIEW

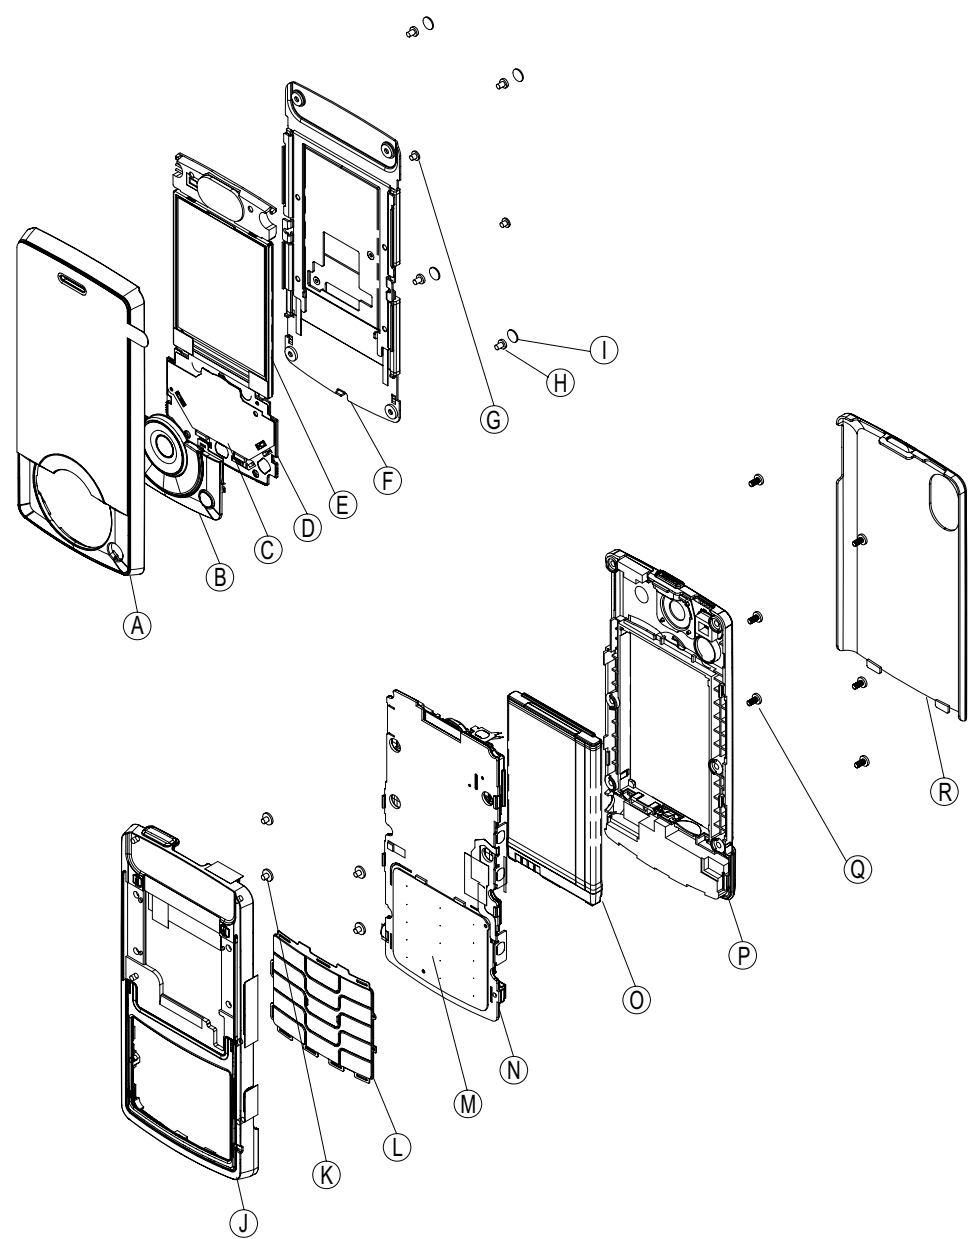

R	COVER,BATTERY	1	MCJA0049501	
Q	SCREW	6	GMZZ0019005	
P	COVER ASSY,REAR	1	ACGM0096501	
O	BATTERY	1		
N	PCB ASSY,MAIN	1		
M	DOME ASSY,METAL	1	ADCA0071601	
L	KEYPAD ASSY,MAIN	1	AKAC0001601	
K	SCREW MACHINE	4	GMEY0017301	
J	COVER ASSY,FRONT	1	ACGK0095501	
I	CAP SCREW	2	MCCH0113801	
H	SCREW MACHINE	4	GMEY0010401	
G	SCREW MACHINE	2	GMZZ0019003	
F	COVER ASSY,SLIDE(LOWER)	1	ACGR0012701	
E	LCD	1		
D	PCB ASSY,SUB	1		
C	DOME ASSY,METAL	1	ADCA0071401	
B	BUTTON ASSY,SUB	1	ABGG0000801	
A	COVER ASSY,SLIDE(UPPER)	1	ACGS0014901	
NO.	DESCRIPTION	Q'TY	DRAWING NO.	REMARK

13. EXPLODED VIEW & REPLACEMENT PART LIST

13.2 Replacement Parts <Mechanic component>

Note: This Chapter is used for reference, Part order is ordered by SBOM standard on GCSC

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
3	MCJZ00	COVER	MCJZ0030501	1146*996*105_TDR_Reliance	Without Color	
3	MPAD00	PACKING,SHELL	MPAD0005804	PRINTING, (empty), , , , ,	Without Color	
3	MPCY00	PALLET	MPCY0013701	COMPLEX, (empty), , , , ,	Without Color	
3	MSCY00	SLEEVE	MSCY0001001	Deadspace Keeping Off_TDR_RLC	Without Color	
2	APEY00	PHONE	APEY0475603		Black Blue	51
3	ACGM00	COVER ASSY,REAR	ACGM0096501		Black	P
4	MCJN00	COVER,REAR	MCJN0072901	MOLD, PC LUPOY SC-1004A, , , , ,	Black	58
4	MGAE00	GASKET,DUST	MGAE0000701	COMPLEX, (empty), , , , ,	Black	63
4	MLAB00	LABEL,A/S	MLAB0001102	C2000 USASV DIA 4.0	White	59
4	MLCE00	LENS,FLASH	MLCE0008301	COMPLEX, (empty), , , , ,	White	62
4	MLEA00	LOCKER,BATTERY	MLEA0041001	MOLD, PC LUPOY SC-1004A, , , , ,	Black	67
4	MPBJ00	PAD,MOTOR	MPBJ0047801	COMPLEX, (empty), , , , ,	Without Color	61
4	MPBT00	PAD,CAMERA	MPBT0048301	COMPLEX, (empty), , , , ,	Without Color	65
4	MPFZ00	PLATE	MPFZ0031801	PRESS, STS, , , , ,	Without Color	66,60
4	MSDC00	SPRING,LOCKER	MSDC0014201	MOLD, PC LUPOY HI-1002M, , , , ,	Metal Silver	68
4	MSDD00	SPRING,PLATE	MSDD0007001	PRESS, STS, , , , ,	White	
4	MTAB00	TAPE,PROTECTION	MTAB0192201	COMPLEX, (empty), , , , ,	Without Color	73
4	MTAB01	TAPE,PROTECTION	MTAB0192301	COMPLEX, (empty), , , , ,	Without Color	64
4	MTAK00	TAPE,CAMERA	MTAK0003601	COMPLEX, (empty), , , , ,	Without Color	69
4	MTAZ00	TAPE	MTAZ0197901	COMPLEX, (empty), , , , ,	Without Color	71
4	MWAE00	WINDOW,CAMERA	MWAE0028901	COMPLEX, (empty), , , , ,	Without Color	70
4	MWAH00	WINDOW,FLASH	MWAH0008601	COMPLEX, (empty), , , , ,	Without Color	72
4	SNGF00	ANTENNA,GSM,FIXED	SNGF0029702	3.0 ,-2.0 dBd,, ,internal, GSM900/1800/1900 ,; ,TRIPLE ,-2.0 ,50 ,3.0		76
4	SNGF01	ANTENNA,GSM,FIXED	SNGF0029801	3.0 ,-2.0 dBd,, ,internal, Bluetooth ,; ,SINGLE ,-2.0 ,50 ,3.0		77
3	ACGQ00	COVER ASSY,SLIDE	ACGQ0020901		Black	
4	ABGG00	BUTTON ASSY,SUB	ABGG0000801		Black	B,4
4	ACGK00	COVER ASSY,FRONT	ACGK0095501		Black	J
5	1	TAPE,PROTECTION	MTAB0209603	COMPLEX, (empty), , , , ,	Without Color	35
5	MBJC00	BUTTON,FUNCTION	MBJC0023201	COMPLEX, (empty), , , , ,	Black	29
5	MBJL00	BUTTON,SIDE	MBJL0046401	COMPLEX, (empty), , , , ,	Black	34
5	MBJL01	BUTTON,SIDE	MBJL0046301	COMPLEX, (empty), , , , ,	Black	31
5	MCCE00	CAP,RECEPTACLE	MCCE0040201	COMPLEX, (empty), , , , ,	Black	27

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
5	MCJK00	COVER,FRONT	MCJK0077201	MOLD, PC LUPOY SC-1004A, , , ,	Black	28
5	MDAG00	DECO,FRONT	MDAG0031101	COMPLEX, (empty), , , ,	Black	25
5	MFBD00	FILTER,MIKE	MFBD0026401	COMPLEX, (empty), , , ,	Black	33
5	MICC00	INSERT,FRONT(UPPER)	MICC0010001	D2.2 L2.0 KURL 45	Gold	36
5	MSGY00	STOPPER	MSGY0022201	COMPLEX, (empty), , , ,	Black	26
5	MTAB00	TAPE,PROTECTION	MTAB0209602	COMPLEX, (empty), , , ,	Without Color	30,32
5	MTAB02	TAPE,PROTECTION	MTAB0209601	COMPLEX, (empty), , , ,	Without Color	
4	ACGR00	COVER ASSY,SLIDE(LOWER)	ACGR0012701		Black	F,21
5	ARDY00	RAIL ASSY,SLIDE	ARDY0003901		Black	
4	ACGS00	COVER ASSY,SLIDE(UPPER)	ACGS0014901		Black	A
5	MCJW00	COVER,SLIDE(UPPER)	MCJW0015201	MOLD, PC LUPOY SC-1004A, , , ,	Black	7
5	MDAE00	DECO,FOLDER(UPPER)	MDAE0041901	MOLD, PC LUPOY SC-1004A, , , ,	Black	3
5	MICE00	INSERT,NUT	MICE0002401	COMPLEX, (empty), , , ,	Without Color	12
5	MICE01	INSERT,NUT	MICE0002402	COMPLEX, (empty), , , ,	Without Color	14
5	MMAA00	MAGNET,SWITCH	MMAA0008701	COMPLEX, (empty), , , ,	Without Color	8
5	MPBG00	PAD,LCD	MPBG0067301	COMPLEX, (empty), , , ,	Black	11
5	MPBN00	PAD,SPEAKER	MPBN0045101	COMPLEX, (empty), , , ,	Black	12
5	MSGY00	STOPPER	MSGY0022001	COMPLEX, (empty), , , ,	Black	9
5	MSGY01	STOPPER	MSGY0022101	COMPLEX, (empty), , , ,	Black	
5	MTAA00	TAPE,DECO	MTAA0147001	COMPLEX, (empty), , , ,	Without Color	6
5	MTAD00	TAPE,WINDOW	MTAD0074701	COMPLEX, (empty), , , ,	Without Color	5
5	MTAZ00	TAPE	MTAZ0207101	COMPLEX, (empty), , , ,	Without Color	78
5	MWAC00	WINDOW,LCD	MWAC0088201	COMPLEX, (empty), , , ,	Without Color	
6	MWAC00	WINDOW,LCD	MWAC0097801	COMPLEX, (empty), , , ,	Without Color	
4	MCCH00	CAP,SCREW	MCCH0113801	COMPLEX, (empty), , , ,	Black	24
4	MLAZ00	LABEL	MLAZ0038303	PRINTING, (empty), , , ,	White	
4	MTAB00	TAPE,PROTECTION	MTAB0192101	COMPLEX, (empty), , , ,	Without Color	1
4	MTAB01	TAPE,PROTECTION	MTAB0197501	COMPLEX, (empty), , , ,	Without Color	20
4	MTAZ00	TAPE	MTAZ0198801	COMPLEX, (empty), , , ,	Without Color	38
4	MTAZ000	TAPE	MTAZ0198803	COMPLEX, (empty), , , ,	Without Color	39
4	MTAZ01	TAPE	MTAZ0198802	COMPLEX, (empty), , , ,	Without Color	

Note: This Chapter is used for reference, Part order is ordered by SBOM standard on GCSC

Copyright © 2008 LG Electronics, Inc. All right reserved.
Only for training and service purposes

- 157 -

LGE Internal Use Only

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
7	C000	CAP,CERAMIC,CHIP	ECCH0005603	2.2 uF,10V ,K ,X5R ,TC ,1608 ,R/TP		
7	C001	CAP,CERAMIC,CHIP	ECCH0005603	2.2 uF,10V ,K ,X5R ,TC ,1608 ,R/TP		
7	C002	CAP,CERAMIC,CHIP	ECCH0000113	18 pF,50V,J,NP0,TC,1005,R/TP		
7	C003	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
7	C004	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
7	C005	CAP,CERAMIC,CHIP	ECCH0005603	2.2 uF,10V ,K ,X5R ,TC ,1608 ,R/TP		
7	C006	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
7	C007	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
7	C008	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
7	C009	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
7	C010	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
7	C011	CAP,CERAMIC,CHIP	ECCH0005603	2.2 uF,10V ,K ,X5R ,TC ,1608 ,R/TP		
7	C012	CAP,CERAMIC,CHIP	ECCH0000117	27 pF,50V,J,NP0,TC,1005,R/TP		
7	C013	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
7	C014	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
7	C015	CAP,CERAMIC,CHIP	ECCH0000117	27 pF,50V,J,NP0,TC,1005,R/TP		
7	CN000	CONNECTOR,BOARD TO BOARD	ENBY0025501	26 PIN,0.4 mm,ETC , ,H=0.9, Socket		
7	CN001	CONNECTOR,BOARD TO BOARD	ENBY0025501	26 PIN,0.4 mm,ETC , ,H=0.9, Socket		
7	CN002	CONNECTOR,FFC/FPC	ENQY0013901	35 PIN,0.3 mm,STRAIGHT , , , , ,0.30MM ,FPC ,STRAIGHT ,BOTH ,SMD ,R/TP ,[empty] ,		
7	FB000	FILTER,BEAD,CHIP	SFBH0000903	600 ohm,1005 ,		
7	FB001	FILTER,BEAD,CHIP	SFBH0000903	600 ohm,1005 ,		
7	FB002	FILTER,BEAD,CHIP	SFBH0000903	600 ohm,1005 ,		
7	R000	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
7	R001	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
7	R002	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
7	R008	RES,CHIP,MAKER	ERHZ0000464	330 ohm,1/16W ,J ,1005 ,R/TP		
7	R010	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
7	R012	RES,CHIP,MAKER	ERHZ0003001	30 Kohm,1/16W ,F ,1005 ,R/TP		
7	R013	RES,CHIP,MAKER	ERHZ0000414	120 Kohm,1/16W ,J ,1005 ,R/TP		
7	R015	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
7	R021	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
7	R022	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
7	R024	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
7	R026	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
7	R027	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
7	R028	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
7	R029	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
7	R030	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
7	R031	RES,CHIP,MAKER	ERHZ0000529	1.5 Kohm,1/16W ,J ,1005 ,R/TP		
7	R032	RES,CHIP,MAKER	ERHZ0000464	330 ohm,1/16W ,J ,1005 ,R/TP		
7	R033	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
7	R034	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
7	R035	RES,CHIP	ERHY0003301	100 ohm,1/16W ,J ,1005 ,R/TP		
7	U000	IC	EUSY0188105	QFN33 ,16 PIN,R/TP ,4LED/25mA, Flash/400mA		
7	U001	IC	EUSY0232812	SON1612-6 ,6 PIN,R/TP ,2.8V, 150mA LDO		
7	U003	IC	EUSY0238302	TDFN44-16 ,16 PIN,R/TP ,4LED, Flash(up to 250mA)Charge pump,PBFREE		
7	VA000	DIODE,TVS	EDTY0009101	SOD-923 ,5 V,150 mW,R/TP ,1.0*0.6*0.4		
7	VA001	DIODE,TVS	EDTY0009101	SOD-923 ,5 V,150 mW,R/TP ,1.0*0.6*0.4		
7	VA002	DIODE,TVS	EDTY0009101	SOD-923 ,5 V,150 mW,R/TP ,1.0*0.6*0.4		
6	SAED00	PCB ASSY,KEYPAD,SMT TOP	SAED0024301			
7	LD000	DIODE,LED,CHIP	EDLH0013403	WHITE ,ETC ,R/TP ,3.8*1.2*0.6T ,; ,[empty] ,2.9~3.2V ,20mA ,1200~1400mcd , ,126mW ,[empty] ,[empty] ,2P		
7	LD001	DIODE,LED,CHIP	EDLH0013403	WHITE ,ETC ,R/TP ,3.8*1.2*0.6T ,; ,[empty] ,2.9~3.2V ,20mA ,1200~1400mcd , ,126mW ,[empty] ,[empty] ,2P		
7	LD002	DIODE,LED,CHIP	EDLH0011901	WHITE ,1608 ,R/TP ,PB-FREE(ZENER)		
7	LD003	DIODE,LED,CHIP	EDLH0011901	WHITE ,1608 ,R/TP ,PB-FREE(ZENER)		
7	LED000	DIODE,LED,CHIP	EDLH0007901	RED ,1608 ,R/TP ,Indicator,0.4T Red LED		
7	LED001	DIODE,LED,CHIP	EDLH0007901	RED ,1608 ,R/TP ,Indicator,0.4T Red LED		
7	LED002	DIODE,LED,CHIP	EDLH0007901	RED ,1608 ,R/TP ,Indicator,0.4T Red LED		
7	LED003	DIODE,LED,CHIP	EDLH0007901	RED ,1608 ,R/TP ,Indicator,0.4T Red LED		
7	R003	RES,CHIP,MAKER	ERHZ0000509	75 ohm,1/16W ,J ,1005 ,R/TP		
7	R004	RES,CHIP,MAKER	ERHZ0000509	75 ohm,1/16W ,J ,1005 ,R/TP		
7	R005	RES,CHIP,MAKER	ERHZ0000458	300 ohm,1/16W ,J ,1005 ,R/TP		
7	R006	RES,CHIP,MAKER	ERHZ0000458	300 ohm,1/16W ,J ,1005 ,R/TP		
7	R017	RES,CHIP,MAKER	ERHZ0000527	200 ohm,1/6W ,J ,1005 ,R/TP		
7	R018	RES,CHIP,MAKER	ERHZ0000527	200 ohm,1/6W ,J ,1005 ,R/TP		
7	R019	RES,CHIP,MAKER	ERHZ0000527	200 ohm,1/6W ,J ,1005 ,R/TP		
7	R020	RES,CHIP,MAKER	ERHZ0000527	200 ohm,1/6W ,J ,1005 ,R/TP		
6	SPEY00	PCB,KEYPAD	SPEY0053801	FR-4 ,0.5 mm,BUILD-UP 4 ,; ,,,,,,,,,,		
4	SUSY00	SPEAKER	SUSY0027602			
4	SVLM00	LCD MODULE	SVLM0027001	MAIN ,240*320 (2.0") ,.37.2*52.1*1.5(T) ,262k ,TFT ,TM ,uPD161707 (NEC) ,IPS		

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
3	AKAC00	KEYPAD ASSY,MAIN	AKAC0001601		Black	L, 40
3	GMZZ00	SCREW MACHINE	GMZZ0019005	3.5 mm,1.5 mm,MSWR3 ,N ,+ ,- ,NYLOK Coating , , , , , , , ,	Black	Q
3	MLAK00	LABEL,MODEL	MLAK0010807	PRINTING, (empty), , , , ,	Without Color	
3	SACY00	PCB ASSY,FLEXIBLE	SACY0066502	SUB FPCB Assy		
4	SACB00	PCB ASSY,FLEXIBLE,INSERT	SACB0041902	SUB FPCB Assy		
5	ABFZ00	BRACKET ASSY	ABFZ0012901	MOTOR	Black	
6	MBFG00	BRACKET,MOTOR	MBFG0000601	COMPLEX, (empty), , , , ,	Black	57
6	MTAZ00	TAPE	MTAZ0195201	COMPLEX, (empty), , , , ,	Without Color	
5	SJMY00	VIBRATOR,MOTOR	SJMY0008406	3 V,80 mA,10*2.7 ,17mm ; , 3V , , ,12000 , , , ,31		
4	SACE00	PCB ASSY,FLEXIBLE,SMT	SACE0060702	SUB FPCB Assy		
5	SACC00	PCB ASSY,FLEXIBLE,SMT BOTTOM	SACC0039402	SUB FPCB Assy		
6	BAT900	BATTERY,CELL,LITHIUM	SBCL0001305	3 V,1 mAh,COIN ,SMT Temp.260 degree. PB-Free B/B		
6	C900	CAP,CERAMIC,CHIP	ECCH0000108	7 pF,50V,D,NP0,TC,1005,R/TP		
6	C901	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C902	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C903	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	CN900	CONNECTOR,BOARD TO BOARD	ENBY0019601	24 PIN,.4 mm,ETC , ,H=1.5, Header		
6	LD900	DIODE,LED,MODULE	EDLM0005501	R,G,B ,3 LED,3.5*2.8*1.8 ,R/TP ,Flash LED		
6	R900	RES,CHIP,MAKER	ERHZ0000473	39 ohm,1/16W ,J ,1005 ,R/TP		
6	R901	RES,CHIP,MAKER	ERHZ0000473	39 ohm,1/16W ,J ,1005 ,R/TP		
6	R902	RES,CHIP,MAKER	ERHZ0000473	39 ohm,1/16W ,J ,1005 ,R/TP		
6	R903	RES,CHIP,MAKER	ERHZ0000473	39 ohm,1/16W ,J ,1005 ,R/TP		
6	R904	RES,CHIP,MAKER	ERHZ0000420	150 ohm,1/16W ,J ,1005 ,R/TP		
6	R905	RES,CHIP,MAKER	ERHZ0000420	150 ohm,1/16W ,J ,1005 ,R/TP		
6	S900	CONN,SOCKET	ENSY0014101	8 PIN,ETC , ,1.1 mm,T-Flash Memory Socket		
6	VA900	VARISTOR	SEVY0004101	5.6 V , SMD ,360pF, 1005		
6	VA901	VARISTOR	SEVY0005202	5.5 V,+30 ,SMD ,1005, 100 pF, Pb free		
6	VA902	VARISTOR	SEVY0005202	5.5 V,+30 ,SMD ,1005, 100 pF, Pb free		
5	SACD00	PCB ASSY,FLEXIBLE,SMT TOP	SACD0050502	SUB FPCB Assy		
5	SPCY00	PCB,FLEXIBLE	SPCY0124801	POLYI , mm,DOUBLE , , , , , , , , , ,		
3	SAFY00	PCB ASSY,MAIN	SAFY0238901			
4	SAFB00	PCB ASSY,MAIN,INSERT	SAFB0079001			
5	ACKA00	CAN ASSY,SHIELD	ACKA0005301		Without Color	
6	MCBA001	CAN,SHIELD	MCBA0023201	PRESS, STS, , , , ,	Without Color	47
6	MLAZ4	LABEL	MLAZ0040401	WEEE Marking Label	Without Color	53

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
6	MPBU005	PAD,CONNECTOR	MPBU0019001	COMPLEX, (empty), , , , ,	Without Color	52
6	MTAC002	TAPE,SHIELD	MTAC0063603	COMPLEX, (empty), , , , ,		48
6	MTAC003	TAPE,SHIELD	MTAC0063601	COMPLEX, (empty), , , , ,	Without Color	50
6	MTAC004	TAPE,SHIELD	MTAC0063602	COMPLEX, (empty), , , , ,		49
5	ACMY00	CAMERA ASSY	ACMY0006401		Without Color	
6	ABFZ00	BRACKET ASSY	ABFZ0013001	CAMERA	Black	
7	MBFP00	BRACKET,CAMERA	MBFP0008001	COMPLEX, (empty), , , , ,	Without Color	45
7	MTAZ00	TAPE	MTAZ0195301	COMPLEX, (empty), , , , ,	Without Color	43
7	MTAZ01	TAPE	MTAZ0205801	COMPLEX, (empty), , , , ,	Without Color	
6	SVCY00	CAMERA	SVCY0015801	CMOS ,MEGA ,2M SS LSI 1/4" Sensor(8" Wafer)		
5	ADCA00	DOME ASSY,METAL	ADCA0071601		Without Color	M,41
5	SPKY00	PCB,SIDEKEY	SPKY0055201	POLYI , mm,DOUBLE , , , , , , , , , , ,		
4	SAFF00	PCB ASSY,MAIN,SMT	SAFF0155701			
5	MLAZ00	LABEL	MLAZ0038301	PID Label 4 Array	Without Color	
5	SAFC00	PCB ASSY,MAIN,SMT BOTTOM	SAFC0101201			
6	C100	CAP,CHIP,MAKER	ECZH0025920	1000 pF,16V ,K ,X7R ,HD ,0603 ,R/TP		
6	C101	CAP,CERAMIC,CHIP	ECCH0009506	27 pF,25V ,J ,NP0 ,TC ,0603 ,R/TP		
6	C104	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C105	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C106	CAP,CERAMIC,CHIP	ECCH0000109	8 pF,50V,D,NP0,TC,1005,R/TP		
6	C107	CAP,CERAMIC,CHIP	ECCH0000109	8 pF,50V,D,NP0,TC,1005,R/TP		
6	C108	CAP,CERAMIC,CHIP	ECCH0000110	10 pF,50V,D,NP0,TC,1005,R/TP		
6	C110	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C111	CAP,CERAMIC,CHIP	ECCH0000117	27 pF,50V,J,NP0,TC,1005,R/TP		
6	C112	CAP,CERAMIC,CHIP	ECCH0000117	27 pF,50V,J,NP0,TC,1005,R/TP		
6	C113	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C114	CAP,TANTAL,CHIP	ECTH0001903	22 uF,6.3V ,M ,L_ESR ,1608 ,R/TP		
6	C115	CAP,TANTAL,CHIP	ECTH0001903	22 uF,6.3V ,M ,L_ESR ,1608 ,R/TP		
6	C116	CAP,CERAMIC,CHIP	ECCH0000163	47 nF,10V,K,X5R,HD,1005,R/TP		
6	C117	CAP,CERAMIC,CHIP	ECCH0000122	47 pF,50V,J,NP0,TC,1005,R/TP		
6	C118	CAP,CERAMIC,CHIP	ECCH0000151	4.7 nF,25V,K,X7R,HD,1005,R/TP		
6	C119	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C120	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C121	CAP,CERAMIC,CHIP	ECCH0007802	4.7 uF,10V ,M ,X5R ,TC ,1608 ,R/TP		
6	C122	CAP,CHIP,MAKER	ECZH0025920	1000 pF,16V ,K ,X7R ,HD ,0603 ,R/TP		
6	C123	CAP,TANTAL,CHIP	ECTH0004807	10 uF,10V ,M ,STD ,1608 ,R/TP , , , , [empty] , [empty] , , -55TO+125C , , [empty] , [empty] , [empty] , [empty]		

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
6	C124	CAP,CERAMIC,CHIP	ECCH0005604	10 uF,6.3V ,M ,X5R ,TC ,1608 ,R/TP		
6	C125	CAP,CERAMIC,CHIP	ECCH0005604	10 uF,6.3V ,M ,X5R ,TC ,1608 ,R/TP		
6	C126	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C127	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C128	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C129	CAP,CHIP,MAKER	ECZH0001210	470 nF,10V ,Z ,Y5V ,HD ,1005 ,R/TP		
6	C130	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C131	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C132	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C133	CAP,CERAMIC,CHIP	ECCH0000198	2.2 uF,6.3V ,M ,X5R ,TC ,1005 ,R/TP		
6	C134	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C135	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C136	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C137	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C138	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C139	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C140	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C141	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C142	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C143	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C144	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C145	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C146	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C147	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C148	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C149	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C150	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C151	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C152	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C153	CAP,TANTAL,CHIP	ECTH0005704	33 uF,10V ,M ,L ,ESR ,2012 ,R/TP , , , [empty] , [empty] , [empty] , , [empty] , [empty] , [empty] , [empty] , [empty]		
6	C154	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C200	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C201	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C202	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
6	C203	CAP,CHIP,MAKER	ECZH0000822	1.5 pF,50V ,C ,NP0 ,TC ,1005 ,R/TP		
6	C204	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
6	C205	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
6	C206	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C207	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C208	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C209	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C210	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C211	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C212	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C213	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C214	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C215	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C216	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C217	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C218	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C219	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C220	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C221	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C223	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C224	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C225	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C226	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C227	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C228	CAP,CERAMIC,CHIP	ECCH0000117	27 pF,50V,J,NP0,TC,1005,R/TP		
6	C300	RES,CHIP,MAKER	ERHZ0000405	10 Kohm,1/16W ,J ,1005 ,R/TP		
6	C301	RES,CHIP,MAKER	ERHZ0000405	10 Kohm,1/16W ,J ,1005 ,R/TP		
6	C302	CAP,CERAMIC,CHIP	ECCH0000122	47 pF,50V,J,NP0,TC,1005,R/TP		
6	C303	CAP,CERAMIC,CHIP	ECCH0000122	47 pF,50V,J,NP0,TC,1005,R/TP		
6	C304	CAP,CERAMIC,CHIP	ECCH0000129	120 pF,50V,J,NP0,TC,1005,R/TP		
6	C305	CAP,CERAMIC,CHIP	ECCH0005604	10 uF,6.3V ,M ,X5R ,TC ,1608 ,R/TP		
6	C306	CAP,CERAMIC,CHIP	ECCH0000127	82 pF,50V,J,NP0,TC,1005,R/TP		
6	C307	CAP,CERAMIC,CHIP	ECCH0000122	47 pF,50V,J,NP0,TC,1005,R/TP		
6	C308	CAP,CERAMIC,CHIP	ECCH0000127	82 pF,50V,J,NP0,TC,1005,R/TP		
6	C309	CAP,CERAMIC,CHIP	ECCH0000122	47 pF,50V,J,NP0,TC,1005,R/TP		
6	C310	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C311	CAP,CERAMIC,CHIP	ECCH0000110	10 pF,50V,D,NP0,TC,1005,R/TP		
6	C312	CAP,CERAMIC,CHIP	ECCH0000129	120 pF,50V,J,NP0,TC,1005,R/TP		

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
6	C313	CAP,CERAMIC,CHIP	ECCH0003002	10000000 pF,10V ,Z ,Y5V ,HD ,2012 ,R/TP , , [empty] , [empty] , [empty] , [empty] , [empty] , 1.25 mm		
6	C314	CAP,CERAMIC,CHIP	ECCH0000287	680 nF,10V ,M ,X5R ,TC ,1608 ,R/TP		
6	C315	CAP,CERAMIC,CHIP	ECCH0000391	1 uF,50V ,Z ,Y5V ,HD ,2012 ,R/TP		
6	C316	CAP,CERAMIC,CHIP	ECCH00009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C317	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C318	CAP,CHIP,MAKER	ECZH0025917	47 pF,25V ,J ,NP0 ,TC ,0603 ,R/TP		
6	C400	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C401	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C402	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
6	C403	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C404	CAP,CERAMIC,CHIP	ECCH0000195	3.9 pF,50V ,C ,NP0 ,TC ,1005 ,R/TP		
6	C405	CAP,CERAMIC,CHIP	ECCH0000161	33 nF,16V,K,X7R,HD,1005,R/TP		
6	C406	CAP,CERAMIC,CHIP	ECCH0000115	22 pF,50V,J,NP0,TC,1005,R/TP		
6	C407	CAP,CERAMIC,CHIP	ECCH0000195	3.9 pF,50V ,C ,NP0 ,TC ,1005 ,R/TP		
6	C408	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C409	CAP,CHIP,MAKER	ECZH0000844	68 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C410	CAP,CERAMIC,CHIP	ECCH0000115	22 pF,50V,J,NP0,TC,1005,R/TP		
6	C411	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C413	CAP,CERAMIC,CHIP	ECCH0000175	2.7 pF,50V ,B ,NP0 ,TC ,1005 ,R/TP		
6	C414	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
6	C415	CAP,CERAMIC,CHIP	ECCH0000175	2.7 pF,50V ,B ,NP0 ,TC ,1005 ,R/TP		
6	C418	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C420	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C421	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C424	CAP,CERAMIC,CHIP	ECCH0000115	22 pF,50V,J,NP0,TC,1005,R/TP		
6	C425	CAP,CHIP,MAKER	ECZH0000841	56 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C426	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C427	CAP,CERAMIC,CHIP	ECCH0000112	15 pF,50V,J,NP0,TC,1005,R/TP		
6	C428	CAP,CERAMIC,CHIP	ECCH00009216	22 pF,25V ,J ,X7R ,TC ,0603 ,R/TP		
6	C429	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C430	CAP,CHIP,MAKER	ECZH0025920	1000 pF,16V ,K ,X7R ,HD ,0603 ,R/TP		
6	C431	CAP,CERAMIC,CHIP	ECCH0000127	82 pF,50V,J,NP0,TC,1005,R/TP		
6	C432	CAP,CERAMIC,CHIP	ECCH0000180	3.3 pF,50V ,C ,NP0 ,TC ,1005 ,R/TP		
6	C433	INDUCTOR,CHIP	ELCH0001048	10 nH,J ,1005 ,R/TP ,PBFREE		
6	C435	CAP,CERAMIC,CHIP	ECCH0003002	10000000 pF,10V ,Z ,Y5V ,HD ,2012 ,R/TP , , [empty] , [empty] , [empty] , [empty] , [empty] , 1.25 mm		
6	C436	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
6	C437	CAP,CERAMIC,CHIP	ECCH0000115	22 pF,50V,J,NP0,TC,1005,R/TP		
6	C438	CAP,CERAMIC,CHIP	ECCH0009216	22 pF,25V ,J ,X7R ,TC ,0603 ,R/TP		
6	C439	CAP,CERAMIC,CHIP	ECCH0000127	82 pF,50V,J,NP0,TC,1005,R/TP		
6	C440	CAP,CERAMIC,CHIP	ECCH0000701	1.2 pF,50V ,C ,NP0 ,TC ,1005 ,R/TP		
6	C442	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C443	CAP,CERAMIC,CHIP	ECCH0007802	4.7 uF,10V ,M ,X5R ,TC ,1608 ,R/TP		
6	C444	CAP,CERAMIC,CHIP	ECCH0007802	4.7 uF,10V ,M ,X5R ,TC ,1608 ,R/TP		
6	C500	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C501	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C502	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C503	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C504	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C505	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C506	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C507	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C508	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C509	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C510	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C511	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C512	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C513	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C514	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C515	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C516	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C517	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C518	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C519	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C520	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C521	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C522	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C523	CAP,CERAMIC,CHIP	ECCH0005604	10 uF,6.3V ,M ,X5R ,TC ,1608 ,R/TP		
6	C524	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C525	CAP,CERAMIC,CHIP	ECCH0007802	4.7 uF,10V ,M ,X5R ,TC ,1608 ,R/TP		
6	C526	CAP,CERAMIC,CHIP	ECCH0009216	22 pF,25V ,J ,X7R ,TC ,0603 ,R/TP		
6	C527	CAP,CERAMIC,CHIP	ECCH0009216	22 pF,25V ,J ,X7R ,TC ,0603 ,R/TP		
6	C528	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
6	C529	CAP,CERAMIC,CHIP	ECCH0000146	1.8 nF,50V,K,X7R,HD,1005,R/TP		

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
6	C530	CAP,CERAMIC,CHIP	ECCH0000146	1.8 nF,50V,K,X7R,HD,1005,R/TP		
6	C531	RES,CHIP	ERHY0009526	4.7 Kohm, 1/20W(0.05W) ,J ,0603 ,R/TP		
6	C600	CAP,CERAMIC,CHIP	ECCH0006201	4.7 uF,6.3V ,K ,X5R ,TC ,1608 ,R/TP		
6	C601	CAP,TANTAL,CHIP	ECTH0004807	10 uF,10V ,M ,STD ,1608 ,R/TP ,; , ,[empty] ,[empty] , , -55TO+125C , ,[empty] ,[empty] ,[empty] ,[empty]		
6	C602	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C603	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C604	CAP,CERAMIC,CHIP	ECCH0009106	10 nF,16V ,K ,X7R ,TC ,0603 ,R/TP		
6	C605	CAP,CERAMIC,CHIP	ECCH0006201	4.7 uF,6.3V ,K ,X5R ,TC ,1608 ,R/TP		
6	C606	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C607	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C608	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C609	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C611	CAP,TANTAL,CHIP	ECTH0005202	100 uF,4V ,M ,L ,ESR ,2012 ,R/TP ,; , ,[empty] ,[empty] , ,[empty] , ,[empty] ,[empty] ,[empty] ,[empty]		
6	C612	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C613	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C614	CAP,TANTAL,CHIP	ECTH0005202	100 uF,4V ,M ,L ,ESR ,2012 ,R/TP ,; , ,[empty] ,[empty] , ,[empty] , ,[empty] ,[empty] ,[empty] ,[empty]		
6	C615	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C616	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C617	CAP,CERAMIC,CHIP	ECCH0000117	27 pF,50V,J,NP0,TC,1005,R/TP		
6	C618	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C619	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C620	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C621	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C622	CAP,CHIP,MAKER	ECZH0025917	47 pF,25V ,J ,NP0 ,TC ,0603 ,R/TP		
6	C623	CAP,CHIP,MAKER	ECZH0025917	47 pF,25V ,J ,NP0 ,TC ,0603 ,R/TP		
6	C624	CAP,CERAMIC,CHIP	ECCH0000117	27 pF,50V,J,NP0,TC,1005,R/TP		
6	C625	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C626	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C627	CAP,CERAMIC,CHIP	ECCH0000117	27 pF,50V,J,NP0,TC,1005,R/TP		
6	C629	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C630	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	C632	CAP,CERAMIC,CHIP	ECCH0000117	27 pF,50V,J,NP0,TC,1005,R/TP		
6	C633	CAP,CERAMIC,CHIP	ECCH0000117	27 pF,50V,J,NP0,TC,1005,R/TP		
6	C634	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C635	CAP,CERAMIC,CHIP	ECCH0005604	10 uF,6.3V ,M ,X5R ,TC ,1608 ,R/TP		

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
6	C636	CAP,TANTAL,CHIP	ECTH0005202	100 uF,4V ,M ,L_ESR ,2012 ,R/TP , , , [empty] , [empty] , [empty] , , [empty] , [empty] , [empty] , [empty] , [empty]		
6	C637	CAP,TANTAL,CHIP	ECTH0005202	100 uF,4V ,M ,L_ESR ,2012 ,R/TP , , , [empty] , [empty] , [empty] , , [empty] , [empty] , [empty] , [empty] , [empty]		
6	C638	CAP,CERAMIC,CHIP	ECCH0000117	27 pF,50V,J,NP0,TC,1005,R/TP		
6	C639	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C700	CAP,TANTAL,CHIP	ECTH0004807	10 uF,10V ,M ,STD ,1608 ,R/TP , , , [empty] , [empty] , , -55TO+125C , , [empty] , [empty] , [empty] , [empty]		
6	C701	CAP,CERAMIC,CHIP	ECCH0009515	150 pF,25V ,K ,X7R ,HD ,0603 ,R/TP		
6	C702	CAP,CERAMIC,CHIP	ECCH0009216	22 pF,25V ,J ,X7R ,TC ,0603 ,R/TP		
6	C703	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C704	CAP,CERAMIC,CHIP	ECCH0009216	22 pF,25V ,J ,X7R ,TC ,0603 ,R/TP		
6	C800	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C801	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C802	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C803	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	C805	CAP,CHIP,MAKER	ECZH0000841	56 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C806	CAP,CERAMIC,CHIP	ECCH0009101	0.1 uF,6.3V ,K ,X5R ,TC ,0603 ,R/TP		
6	C807	CAP,CHIP,MAKER	ECZH0000841	56 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C808	CAP,CHIP,MAKER	ECZH0003103	0.1 uF,10V ,K ,X7R ,HD ,1005 ,R/TP		
6	CN300	CONNECTOR,I/O	ENRY0006401	18 PIN,0.4 mm,ANGLE , ,H=2.5, Reverse Type		
6	CN700	CONNECTOR,ETC	ENZY0019801	3 PIN, mm,ETC , ,3 PIN, 1.9 mm, ETC , ,Battery Connector		
6	CN800	CONNECTOR,BOARD TO BOARD	ENBY0042701	54 PIN,0.4 mm,ETC , , , ,0.40MM , [empty] , FEMALE ,SMD ,R/TP , ,		
6	CN801	CONNECTOR,BOARD TO BOARD	ENBY0020401	24 PIN,0.4 mm,ETC , ,H=0.9, Socket		
6	CN802	CONNECTOR,BOARD TO BOARD	ENBY0021001	24 PIN,0.4 mm,ETC , ,H=2.5		
6	FB300	FILTER,BEAD,CHIP	SFBH0000903	600 ohm,1005 ,		
6	FB301	FILTER,BEAD,CHIP	SFBH0000903	600 ohm,1005 ,		
6	FB302	FILTER,BEAD,CHIP	SFBH0008103	1000 ohm,1005 ,chip bead, 200mA,DCR0.9ohm , , , ,SMD ,R/TP		
6	FB303	FILTER,BEAD,CHIP	SFBH0008103	1000 ohm,1005 ,chip bead, 200mA,DCR0.9ohm , , , ,SMD ,R/TP		
6	FB304	FILTER,BEAD,CHIP	SFBH0008103	1000 ohm,1005 ,chip bead, 200mA,DCR0.9ohm , , , ,SMD ,R/TP		
6	FB305	FILTER,BEAD,CHIP	SFBH0008103	1000 ohm,1005 ,chip bead, 200mA,DCR0.9ohm , , , ,SMD ,R/TP		
6	FB306	FILTER,BEAD,CHIP	SFBH0008103	1000 ohm,1005 ,chip bead, 200mA,DCR0.9ohm , , , ,SMD ,R/TP		
6	FB800	FILTER,BEAD,CHIP	SFBH0000903	600 ohm,1005 ,		

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
6	FL200	FILTER,DIELECTRIC	SFDY0002701	2450 MHz,2.5*2.0*1.2 ,SMD ,2400M~2500M, IL 3.3, 6pin, U-B, 50-100, BT BPF (TI BRF6300) , ,BPF ,2450 ,2.5*2.0*1.2 ,SMD ,R/TP		
6	FL400	FILTER,SEPERATOR	SFAY0011302	850 ,1800.1900 , dB, dB, dB,4532 ,GSM Triple band FEM		
6	FL800	FILTER,EMI/POWER	SFEY0013201	SMD ,1608 ,EMI-ESD Filter, 4ch, 14V, 15pF, 100ohm		
6	FL801	FILTER,EMI/POWER	SFEY0013201	SMD ,1608 ,EMI-ESD Filter, 4ch, 14V, 15pF, 100ohm		
6	FL802	FILTER,EMI/POWER	SFEY0013201	SMD ,1608 ,EMI-ESD Filter, 4ch, 14V, 15pF, 100ohm		
6	FL803	FILTER,EMI/POWER	SFEY0013201	SMD ,1608 ,EMI-ESD Filter, 4ch, 14V, 15pF, 100ohm		
6	FL804	FILTER,EMI/POWER	SFEY0013201	SMD ,1608 ,EMI-ESD Filter, 4ch, 14V, 15pF, 100ohm		
6	FL805	FILTER,EMI/POWER	SFEY0013201	SMD ,1608 ,EMI-ESD Filter, 4ch, 14V, 15pF, 100ohm		
6	FL806	FILTER,EMI/POWER	SFEY0013701	SMD ,18 V,4ch. EMI_ESD Filter (100 Ohm, 7.5pF)		
6	FL807	FILTER,EMI/POWER	SFEY0013201	SMD ,1608 ,EMI-ESD Filter, 4ch, 14V, 15pF, 100ohm		
6	J300	CONN,JACK/PLUG,EARPH ONE	ENJE0006601	4 ,4 PIN, , ,4P ,[empty] ,ANGLE ,[empty] , ,BLACK ,		
6	J700	CONN,SOCKET	ENSY0018701	6 PIN,ETC , ,2.54 mm,H=1.8		
6	L100	INDUCTOR,CHIP	ELCH0005009	100 nH,J ,1005 ,R/TP ,		
6	L101	INDUCTOR,CHIP	ELCH0005009	100 nH,J ,1005 ,R/TP ,		
6	L102	INDUCTOR,CHIP	ELCH0005009	100 nH,J ,1005 ,R/TP ,		
6	L103	INDUCTOR,SMD,POWER	ELCP0009403	2.2 uH,M ,2.8*2.6*1 ,R/TP ,power inductor		
6	L200	INDUCTOR,CHIP	ELCH0004727	100 nH,J ,1005 ,R/TP ,		
6	L201	INDUCTOR,CHIP	ELCH0004707	1.5 nH,S ,1005 ,R/TP ,		
6	L202	INDUCTOR,CHIP	ELCH0004707	1.5 nH,S ,1005 ,R/TP ,		
6	L300	INDUCTOR,CHIP	ELCH0005009	100 nH,J ,1005 ,R/TP ,		
6	L301	INDUCTOR,CHIP	ELCH0005009	100 nH,J ,1005 ,R/TP ,		
6	L302	INDUCTOR,CHIP	ELCH0005009	100 nH,J ,1005 ,R/TP ,		
6	L303	INDUCTOR,CHIP	ELCH0005009	100 nH,J ,1005 ,R/TP ,		
6	L304	INDUCTOR,CHIP	ELCH0010402	270 nH,M ,1005 ,R/TP ,CHIP		
6	L305	INDUCTOR,CHIP	ELCH0005009	100 nH,J ,1005 ,R/TP ,		
6	L400	INDUCTOR,CHIP	ELCH0001035	4.7 nH,S ,1005 ,R/TP ,PBFREE		
6	L401	INDUCTOR,CHIP	ELCH0005016	8.2 nH,J ,1005 ,R/TP ,		
6	L402	NOT ASSEMBLE	9999999999	NOT ASSEMBLE	Color Unfixed	
6	L403	INDUCTOR,CHIP	ELCH0004701	12 nH,J ,1005 ,R/TP ,		
6	L404	INDUCTOR,CHIP	ELCH0004727	100 nH,J ,1005 ,R/TP ,		
6	L405	INDUCTOR,CHIP	ELCH0004709	3.3 nH,S ,1005 ,R/TP ,		
6	L406	INDUCTOR,CHIP	ELCH0004723	1.8 nH,S ,1005 ,R/TP ,		
6	L407	INDUCTOR,CHIP	ELCH0004704	4.7 nH,S ,1005 ,R/TP ,		
6	L408	INDUCTOR,CHIP	ELCH0004704	4.7 nH,S ,1005 ,R/TP ,		
6	L409	INDUCTOR,CHIP	ELCH0001405	3.3 nH,S ,1005 ,R/TP ,PBFREE		

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
6	L410	INDUCTOR,CHIP	ELCH0001405	3.3 nH,S ,1005 ,R/TP ,PBFREE		
6	L500	INDUCTOR,SMD,POWER	ELCP0008004	4.7 uH,M ,1 ,R/TP , , , , 0.3NH , , , , ,NON SHIELD 2.5X2X1MM ,11MM ,R/TP		
6	L600	INDUCTOR,CHIP	ELCH0004727	100 nH,J ,1005 ,R/TP ,		
6	L601	INDUCTOR,CHIP	ELCH0004727	100 nH,J ,1005 ,R/TP ,		
6	L602	INDUCTOR,CHIP	ELCH0005009	100 nH,J ,1005 ,R/TP ,		
6	L603	INDUCTOR,CHIP	ELCH0004727	100 nH,J ,1005 ,R/TP ,		
6	L604	INDUCTOR,CHIP	ELCH0004727	100 nH,J ,1005 ,R/TP ,		
6	MIC600	MICROPHONE	SUMY0010604	UNIT , -38 dB,4.72*3.76 ,1.25T Bottom Silicon type , , , ,UNI ,1.5V , ,SMD		
6	PT400	THERMISTOR	SETY0006501	NTC ,22000 ohm,SMD ,1005, ECTH 1005 Series, Pb Free		
6	Q100	TR,BJT,NPN	EQBN0004703	VMT3 ,150 mW,R/TP ,		
6	Q300	TR,BJT,NPN	EQBN0007101	EMT3 ,0.15 W,R/TP ,LOW FREQUENCY		
6	Q500	TR,FET,N-CHANNEL	EQFN0005201	SOT-323 ,.29 W,25 V,.7 A,R/TP ,N-Channel MOSFET, Pb free		
6	R100	RES,CHIP	ERHY0009505	10 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R101	RES,CHIP	ERHY0009505	10 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R102	RES,CHIP	ERHY0009506	100 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R103	RES,CHIP	ERHY0009506	100 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R104	RES,CHIP	ERHY0009506	100 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R106	RES,CHIP	ERHY0009560	33 Kohm,1/20W(0.05W) ,F ,0603 ,R/TP		
6	R107	RES,CHIP	ERHY0009505	10 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R108	CAP,CHIP,MAKER	ECZH0001215	1 uF,10V ,K ,X5R ,TC ,1005 ,R/TP		
6	R109	RES,CHIP	ERHY0009506	100 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R110	RES,CHIP	ERHY0009506	100 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R112	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R113	RES,CHIP,MAKER	ERHZ0000405	10 Kohm,1/16W ,J ,1005 ,R/TP		
6	R114	RES,CHIP,MAKER	ERHZ0000445	220 Kohm,1/16W ,J ,1005 ,R/TP		
6	R115	RES,CHIP,MAKER	ERHZ0000465	3300 ohm,1/16W ,J ,1005 ,R/TP		
6	R116	RES,CHIP,MAKER	ERHZ0000465	3300 ohm,1/16W ,J ,1005 ,R/TP		
6	R117	RES,CHIP,MAKER	ERHZ0000404	1 Kohm,1/16W ,J ,1005 ,R/TP		
6	R118	RES,CHIP,MAKER	ERHZ0004201	121000 ohm,1/16W ,F ,1005 ,R/TP		
6	R119	RES,CHIP	ERHY0009504	1 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R121	RES,CHIP	ERHY0009505	10 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R124	RES,CHIP	ERHY0000128	15K ohm,1/16W,F,1005,R/TP		
6	R125	RES,CHIP,MAKER	ERHZ0000405	10 Kohm,1/16W ,J ,1005 ,R/TP		
6	R126	RES,CHIP	ERHY0009506	100 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R127	RES,CHIP,MAKER	ERHZ0000402	10 ohm,1/16W ,J ,1005 ,R/TP		

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
6	R128	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R201	RES,CHIP,MAKER	ERHZ0000529	1.5 Kohm,1/16W ,J ,1005 ,R/TP		
6	R202	RES,CHIP,MAKER	ERHZ0000437	2 Kohm,1/16W ,J ,1005 ,R/TP		
6	R203	RES,CHIP,MAKER	ERHZ0000405	10 Kohm,1/16W ,J ,1005 ,R/TP		
6	R204	RES,CHIP,MAKER	ERHZ0000486	47 Kohm,1/16W ,J ,1005 ,R/TP		
6	R206	RES,CHIP,MAKER	ERHZ0000485	4700 ohm,1/16W ,J ,1005 ,R/TP		
6	R300	RES,CHIP,MAKER	ERHZ0000245	220 Kohm,1/16W ,F ,1005 ,R/TP		
6	R301	RES,CHIP,MAKER	ERHZ0000404	1 Kohm,1/16W ,J ,1005 ,R/TP		
6	R302	RES,CHIP,MAKER	ERHZ0000486	47 Kohm,1/16W ,J ,1005 ,R/TP		
6	R303	RES,CHIP,MAKER	ERHZ0000203	10 Kohm,1/16W ,F ,1005 ,R/TP		
6	R304	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R305	RES,CHIP	ERHY0009506	100 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R307	RES,CHIP,MAKER	ERHZ0000459	3 Kohm,1/16W ,J ,1005 ,R/TP		
6	R308	RES,CHIP	ERHY0000248	2.4K ohm,1/16W,J,1005,R/TP		
6	R309	RES,CHIP,MAKER	ERHZ0000483	47 ohm,1/16W ,J ,1005 ,R/TP		
6	R310	RES,CHIP,MAKER	ERHZ0000405	10 Kohm,1/16W ,J ,1005 ,R/TP		
6	R311	RES,CHIP	ERHY0009506	100 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R312	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R313	RES,CHIP	ERHY0009506	100 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R314	RES,CHIP	ERHY0009527	47 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R315	RES,CHIP	ERHY0009505	10 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R316	RES,CHIP	ERHY0009506	100 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R317	RES,CHIP	ERHY0009505	10 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R318	RES,CHIP	ERHY0009554	20 Kohm,1/20W(0.05W) ,F ,0603 ,R/TP		
6	R319	RES,CHIP	ERHY0009505	10 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R320	RES,CHIP	ERHY0009554	20 Kohm,1/20W(0.05W) ,F ,0603 ,R/TP		
6	R321	RES,CHIP	ERHY0009560	33 Kohm,1/20W(0.05W) ,F ,0603 ,R/TP		
6	R322	RES,CHIP	ERHY0009505	10 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R400	RES,CHIP,MAKER	ERHZ0000486	47 Kohm,1/16W ,J ,1005 ,R/TP		
6	R401	RES,CHIP	ERHY0009504	1 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R402	RES,CHIP	ERHY0009543	120 ohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R403	RES,CHIP	ERHY0009503	100 ohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R404	RES,CHIP,MAKER	ERHZ0000490	51 ohm,1/16W ,J ,1005 ,R/TP		
6	R405	RES,CHIP,MAKER	ERHZ0000504	68 ohm,1/16W ,J ,1005 ,R/TP		
6	R406	RES,CHIP	ERHY0009543	120 ohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R407	RES,CHIP	ERHY0009503	100 ohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R408	RES,CHIP	ERHY0009503	100 ohm,1/20W(0.05W) ,J ,0603 ,R/TP		

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
6	R410	RES,CHIP,MAKER	ERHZ0000434	1 ohm,1/16W ,J ,1005 ,R/TP		
6	R411	RES,CHIP,MAKER	ERHZ0000472	36 Kohm,1/16W ,J ,1005 ,R/TP		
6	R412	RES,CHIP	ERHY0009550	47 Kohm,1/20W(0.05W) ,F ,0603 ,R/TP		
6	R502	RES,CHIP,MAKER	ERHZ0000485	4700 ohm,1/16W ,J ,1005 ,R/TP		
6	R503	RES,CHIP,MAKER	ERHZ0000485	4700 ohm,1/16W ,J ,1005 ,R/TP		
6	R504	RES,CHIP,MAKER	ERHZ0000486	47 Kohm,1/16W ,J ,1005 ,R/TP		
6	R505	RES,CHIP,MAKER	ERHZ0000486	47 Kohm,1/16W ,J ,1005 ,R/TP		
6	R506	RES,CHIP,MAKER	ERHZ0000486	47 Kohm,1/16W ,J ,1005 ,R/TP		
6	R509	RES,CHIP	ERHY0009505	10 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R510	RES,CHIP,MAKER	ERHZ0000486	47 Kohm,1/16W ,J ,1005 ,R/TP		
6	R511	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R512	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R513	RES,CHIP,MAKER	ERHZ0000486	47 Kohm,1/16W ,J ,1005 ,R/TP		
6	R515	RES,CHIP,MAKER	ERHZ0000323	91 Kohm,1/16W ,F ,1005 ,R/TP		
6	R516	RES,CHIP	ERHY0000161	200K ohm,1/16W,F,1005,R/TP		
6	R517	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R518	RES,CHIP	ERHY0009527	47 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R519	RES,CHIP	ERHY0009527	47 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R520	RES,CHIP	ERHY0009527	47 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R521	RES,CHIP	ERHY0009527	47 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R524	RES,CHIP,MAKER	ERHZ0000308	62 Kohm,1/16W ,F ,1005 ,R/TP		
6	R525	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R526	RES,CHIP	ERHY0009527	47 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R527	RES,CHIP	ERHY0009527	47 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R528	RES,CHIP,MAKER	ERHZ0000405	10 Kohm,1/16W ,J ,1005 ,R/TP		
6	R529	RES,CHIP	ERHY0000189	3.9 Kohm,1/16W ,F ,1005 ,R/TP		
6	R530	RES,CHIP	ERHY0009561	56 Kohm,1/20W(0.05W) ,F ,0603 ,R/TP		
6	R531	RES,CHIP	ERHY0009561	56 Kohm,1/20W(0.05W) ,F ,0603 ,R/TP		
6	R532	RES,CHIP	ERHY0009561	56 Kohm,1/20W(0.05W) ,F ,0603 ,R/TP		
6	R533	RES,CHIP	ERHY0009561	56 Kohm,1/20W(0.05W) ,F ,0603 ,R/TP		
6	R534	RES,CHIP	ERHY0009561	56 Kohm,1/20W(0.05W) ,F ,0603 ,R/TP		
6	R535	RES,CHIP,MAKER	ERHZ0000404	1 Kohm,1/16W ,J ,1005 ,R/TP		
6	R536	RES,CHIP,MAKER	ERHZ0000467	330 Kohm,1/16W ,J ,1005 ,R/TP		
6	R538	RES,CHIP	ERHY0008502	2.7 Kohm,1/16W ,F ,1005 ,R/TP		
6	R539	RES,CHIP	ERHY0009505	10 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R540	RES,CHIP	ERHY0009526	4.7 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R541	RES,CHIP,MAKER	ERHZ0000486	47 Kohm,1/16W ,J ,1005 ,R/TP		

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
6	R604	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R605	RES,CHIP,MAKER	ERHZ0000402	10 ohm,1/16W ,J ,1005 ,R/TP		
6	R607	RES,CHIP,MAKER	ERHZ0000402	10 ohm,1/16W ,J ,1005 ,R/TP		
6	R608	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R609	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R614	RES,CHIP,MAKER	ERHZ0000406	100 Kohm,1/16W ,J ,1005 ,R/TP		
6	R700	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R701	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R702	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R703	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R704	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R705	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R706	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R707	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R708	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R709	RES,CHIP	ERHY0000261	10K ohm,1/16W,J,1005,R/TP		
6	R710	RES,CHIP,MAKER	ERHZ0000522	24 ohm,1/16W ,J ,1005 ,R/TP		
6	R800	RES,CHIP	ERHY0009506	100 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R801	RES,CHIP	ERHY0009506	100 Kohm,1/20W(0.05W) ,J ,0603 ,R/TP		
6	R802	RES,CHIP	ERHY0009554	20 Kohm,1/20W(0.05W) ,F ,0603 ,R/TP		
6	SW400	CONN,RF SWITCH	ENWY0001801	STRAIGHT ,SMD ,2 dB,3000PCS/REEL		
6	U101	IC	EUSY0254701	DFN 3*3*0.9 ,10 PIN,R/TP ,Charger IC, I Max 1A, Wall Adaptor/USB Charger		
6	U102	IC	EUSY0266502	PBGA ,143 PIN,R/TP ,Triton, Analog Base Band		
6	U103	IC	EUSY0266401	PBGA ,293 PIN,R/TP ,Neptune, E-GPRS-MPU + C54x DSP		
6	U200	IC	EUSY0311701	uBGA ,63 PIN,R/TP ,Bluetooth Sigle-chip(v2.0+EDR),4.5x4.5x0.8		
6	U201	IC	EUSY0335802	FBGA ,107 PIN,ETC ,FULLY 1.8V 1G(128Mx8) NAND+512M(DDR/8Mx4x16) SDRAM ,; ,IC,MCP		
6	U202	IC	EUSY0355801	QFN ,20 PIN,R/TP ,FM Tuner(RDS), 3*3*0.55, Pb Free ,; ,IC Assembly		
6	U203	IC	EUSY0278501	SON5-P-0.50 ,5 PIN,R/TP ,INVERTER GATE, Pb Free		
6	U300	IC	EUSY0077701	SC70-5 ,5 PIN,R/TP ,1.8V Low Voltage Comparator with Rail-to-Rail Input, Pb Free		
6	U301	IC	EUSY0186502	Micropak ,6 PIN,R/TP ,Single SPDT Analog Switch, Pb Free		
6	U302	IC	EUSY0342401	WQFN16 ,16 PIN,R/TP ,Dual DPDT Analog Switch ,; ,IC,Analog Switch		
6	U303	IC	EUSY0319201	DFN ,10 PIN,R/TP ,OVP		

13. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
6	U304	IC	EUSY0338301	uMLP ,10 PIN,R/TP ,High Speed USB Siwitch 2.0 3.7pF 6.5ohm 1.4X1.8		
6	U305	IC	EUSY0340301	uMLP ,10 PIN,R/TP ,typ Rdson 0.4ohm, 1.4X1.8 ,; ,IC,Analog Switch		
6	U400	IC	EUSY0245902	DRL ,5 PIN,R/TP ,SINGLE,BUFFER,3STATE,1.7X1.7		
6	U401	IC	EUSY0245902	DRL ,5 PIN,R/TP ,SINGLE,BUFFER,3STATE,1.7X1.7		
6	U402	IC	EUSY0316801	BGA ,72 PIN,R/TP ,EDGE Tranceiver, 5X5 Size, B6PLD		
6	U403	PAM	SMPY0014901	dBm, %, A, dBc, dB, ,SMD ,; ,; ,; ,; ,; ,; ,; ,R/TP ,R/TP ,		
6	U404	IC	EUSY0345901	WDFN ,8 PIN,R/TP ,2X2 Dual LDO 2.8V/2.8V 300mA/300mA ,; ,IC,LDO Voltage Regulator		
6	U500	IC	EUSY0239302	HVSOF6 ,6 PIN,R/TP ,300mA CMOS LDO WITH OUTPUT CONTROL / 3.3V		
6	U501	IC	EUSY0246801	HVSOF6 ,6 PIN,R/TP ,300mA 2.8V LDO		
6	U502	IC	EUSY0264501	SC70JW-8 ,8 PIN,R/TP ,400mA, ADJ, DC/DC,PBFREE		
6	U503	IC	EUSY0342403	UDFN ,8 PIN,R/TP ,1.8X1.2,DFN ,; ,IC,Bus Controller		
6	U504	IC	EUSY0315701	BGA ,181 PIN,R/TP ,2M,MP3,USB2.0		
6	U600	IC	EUSY0232816	SON1612-6 ,6 PIN,R/TP ,3.0V ,150mA,LDO		
6	U601	IC	EUSY0340301	uMLP ,10 PIN,R/TP ,typ Rdson 0.4ohm, 1.4X1.8 ,; ,IC,Analog Switch		
6	U602	IC	EUSY0343501	CSP ,42 PIN,R/TP ,Audio CODEC with Class AB,D dual speaker driver, Dual DAC ,; ,IC,Audio Codec		
6	U603	IC	EUSY0340301	uMLP ,10 PIN,R/TP ,typ Rdson 0.4ohm, 1.4X1.8 ,; ,IC,Analog Switch		
6	U604	IC	EUSY0340301	uMLP ,10 PIN,R/TP ,typ Rdson 0.4ohm, 1.4X1.8 ,; ,IC,Analog Switch		
6	U800	IC	EUSY0223001	HVSOF5 ,5 PIN,R/TP ,150mA CMOS LDO WITH OUTPUT CONTROL / 1.5V		
6	U801	IC	EUSY0232812	SON1612-6 ,6 PIN,R/TP ,2.8V, 150mA LDO		
6	VA300	VARISTOR	SEVY0001001	14 V , ,SMD ,50pF, 1005		
6	VA301	VARISTOR	SEVY0001001	14 V , ,SMD ,50pF, 1005		
6	VA600	VARISTOR	SEVY0001001	14 V , ,SMD ,50pF, 1005		
6	VA705	VARISTOR	SEVY0005202	5.5 V ,+30 ,SMD ,1005, 100 pF, Pb free		
6	X100	X-TAL	EXXY0004601	.032768 MHz,20 PPM,7 pF,65000 ohm,SMD ,6.9*1.4*1.3 ,		
6	X400	X-TAL	EXXY0019501	26 MHz,10 PPM,8 pF,50 ohm,SMD ,3.2*2.5*0.6 ,		
6	X500	X-TAL	EXXY0017801	12 MHz,50 PPM,8 pF,80 ohm,SMD ,3.2*2.5*0.75 ,20ppm at 25°C, 30ppm at -30°C ~ +85°C		
6	ZD300	DIODE,TVS	EDTY0009101	SOD-923 ,5 V,150 mW,R/TP ,1.0*0.6*0.4		
6	ZD301	DIODE,TVS	EDTY0009101	SOD-923 ,5 V,150 mW,R/TP ,1.0*0.6*0.4		
6	ZD800	DIODE,TVS	EDTY0009101	SOD-923 ,5 V,150 mW,R/TP ,1.0*0.6*0.4		
5	SAFD00	PCB ASSY,MAIN,SMT TOP	SAFD0100001			
6	C102	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
6	C103	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	LD700	DIODE,LED,CHIP	EDLH0013401	WHITE ,ETC ,R/TP ,SIDEVIEW LED ; , [empty] , , , , , [empty] , [empty] , 2P		
6	LD701	DIODE,LED,CHIP	EDLH0013401	WHITE ,ETC ,R/TP ,SIDEVIEW LED ; , [empty] , , , , , [empty] , [empty] , 2P		
6	R711	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R712	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R713	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R714	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R715	RES,CHIP,MAKER	ERHZ0000505	680 ohm,1/16W ,J ,1005 ,R/TP		
6	R718	RES,CHIP,MAKER	ERHZ0000402	10 ohm,1/16W ,J ,1005 ,R/TP		
6	R719	RES,CHIP,MAKER	ERHZ0000402	10 ohm,1/16W ,J ,1005 ,R/TP		
6	SPFY00	PCB,MAIN	SPFY0170001	FR-4 ,0.8 mm,STAGGERED-8 , , , , , , , , , ,		
6	U100	IC	EUSY0313401	QFN ,4 PIN,R/TP ,1.8X1.2X0.5 size wide input voltage Hall Switch		
6	VA700	VARISTOR	SEVY0005202	5.5 V,+30 ,SMD ,1005, 100 pF, Pb free		
6	VA701	VARISTOR	SEVY0005202	5.5 V,+30 ,SMD ,1005, 100 pF, Pb free		
6	VA702	VARISTOR	SEVY0005202	5.5 V,+30 ,SMD ,1005, 100 pF, Pb free		
6	VA703	VARISTOR	SEVY0005202	5.5 V,+30 ,SMD ,1005, 100 pF, Pb free		
6	VA704	VARISTOR	SEVY0005202	5.5 V,+30 ,SMD ,1005, 100 pF, Pb free		
3	SMZY00	MODULE,ETC	SMZY0017801	1GB / MICROSD / MLC 1 DIE ; , Module Assembly		

13. EXPLODED VIEW & REPLACEMENT PART LIST

12.3 Accessory

Note: This Chapter is used for reference, Part order is ordered by SBOM standard on GCSC

Level	Location No.	Part Name	Part Number	Description	Color	Remrak
2	AAAY00	ADDITION	AAAY0257102		Black Blue	
3	ADEY00	DATA KIT	ADEY0007709	KM500 CD ASSY for Brazil vivo	Without Color	
4	MCHZ00	COMPACT DISK	MCHZ0046201	COMPLEX, (empty), , , , ,	Without Color	
3	MCJA00	COVER,BATTERY	MCJA0049501	CUTTING, Al, , , , ,	Black	R, 75
3	MMBB00	MANUAL, OPERATION	MMBB0238833	PRINTING, (empty), , , , ,	Without Color	
3	SBPL00	BATTERY PACK, LI-ION	SBPL0092901	3.7 V, 800 mAh, 1 CELL, PRISMATIC , KM500 Latin America BATT, Pb-Free , ; 3.7 , 800 , 0.2C , PRISMATIC , 50x34x36 , , BLACK , Innerpack , Latin America Label	Black	
3	SGDY00	DATA CABLE	SGDY0010904	; , [empty] , [empty] , [empty] , 18 , BLACK , 6.2mm Plug Data cable , [empty]		
3	SGEY00	EAR PHONE/EAR MIKE SET	SGEY0005537	, , , , , , , , , ,		
3	SSAD00	ADAPTOR, AC-DC	SSAD0024601	100-240V , 5060 Hz, 5.1 V, .7 A, NOM , AC-DC ADAPTOR , ; , 85Vac~264Vac , 5.1V +0.15V, -0.2V , 700mA , 5060 , , WALL 2P , I/O CONNECTOR ,		
		ADAPTOR, AC-DC	SSAD0024602	100-240V , 5060 Hz, 5.1 V, .7 A, NOM , AC-DC ADAPTOR , ; , 85Vac~264Vac , 5.1V (+0.15V, -0.2V) , 700mA , 5060 , , WALL 2P , I/O CONNECTOR ,		